Bulb Revolving Warning light and Electric Horn Combination for Vessels

SHD/SHD2



 












Thank you for purchasing Qlight's products. Please read this user manual carefully prior to installation and operation to ensure safe and correct use.

▲ Precautions for Safety

Failure to follow the instructions below may cause a loss of life or serious physical injury.

- 1. During wiring or maintenance, please completely turn off the power of the product. (Failure to follow this may lead to an electric shock.)
- 2. Do not install the product in locations that subjects it to excessive dust or water other than the conditions designated by the IP protection ratings indicated for each product. (Failure to follow these instructions may cause a fire to the product, electric shock, physical injury, malfunction or damage to the product.)
- 3. Do not alter or repair this product. If maintenance or repair service is required, please contact your local Qlight contact point. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
- 4. Please apply the correct voltage to the product. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
- 5. When the product is applied to a condition that may impact lives or property, please make sure to have a double safety device. (Failure to follow this may cause damage to property, fire, electric shock and loss of life.)

▲ Precautions for Correct Use

Failure to follow the proper instructions may cause damage to property, the product, or malfunction of the product that would void the warranty.

- 1. Please remove any objects that can interrupt ventilation around the product.
- 2. Please turn off the power of the product immediately if it fails to operate properly.
- 3. Carefully wire the product according to each product's specification.
- 4. Please be careful in preventing chemicals such as thinner, benzene, etc. in contact with the surface of the product.
- 5. Do not apply excessive force/impact to the product.
- 6. Failure to follow any of the instructions above may cause malfunction or damage to the product, fire, and electric shock.

Ordering Specifications

SHD		WA	. 24 .	R	
[Model number]		[Sound]	[Voltage]	[Color]	
1		1	1	I	
• SHD	 WS-Warning sounds 	 WP-special warning sounds 	• 12 - DC12V	R-Red	
• SHD2	 WM-Melodies 	 WA-Alarms 	• 24 - DC24V	A-Amber	
• SHDP	 WV-Customizable soun 	ds	• 110 - AC110V	G-Green	
• SHD2P			• 220 - AC220V	B-Blue	

Product Specifications

Model			Bulb specifications		S				
number	Voltage	Current	Volts/ Watts	Configuration	Part#	Sound pattern and volume	Certificates	Weight	Color
	DC12V	3.755A			17	WS-5 Warning Sounds: Max.118dB WP-Special warning sounds: Max.118dB WM-5 Melodies: Max.118dB WA-5 Alarms: Max.116dB	CCS	• SHD DC-3.18kg, AC-3.89kg • SHDP	R-Red
SHD	SHD DC24V 1.78	1.788A			18				
SHDP	AC110V	0.422A			17				
AC220V	0.211A	12V15W	G23 15S	17	• WV-5 Customizable sounds : Max.113dB	39 ARS	DC-4.43kg, AC-4.14kg	A-Amber	
	DC12V	5.966A	1201500	G23 133	17	WS-5 Warning Sounds : Max.118dB		• SHD2	G-Green
SHD2 DC24V 2	2.755A			18	WP-Special warning sounds : Max.118dB WM-5 Melodies : Max.118dB		DC-4.11kg, AC-4.44kg	B-Blue	
SHD2P	SHD2P AC110V 0.648A		17	WA-5 Alarms : Max.116dB	_	• SHD2P			
AC22f	AC220V	0.324A		17	WV-5 Customizable sounds : Max.113dB		DC-4.36kg, AC-4.69kg		

* CE compliant : AC220V, DC24V


• Protection rating : IP66

• Ambient operating temperature : -20°C to +50°C



Please scan the QR code for more detailed product information.


Dimensions (Units:mm)

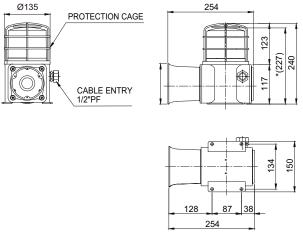

SHD/ SHDP

* *(227) represents without protection cage.

Sound Setting - Select using the switch inside of the unit.

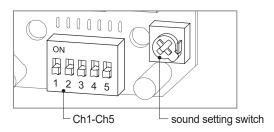

- Standard unit has 5 built-in sound tones.
 Select different built-in sounds using the sound setting switch.
- For standard type, once the unit is powered on, light and sound are working simultaneously.

■ Sound Type by Group


Category	Sound pattern	Channel	Sound tone	volume (Max.)	
		Ch1	Fire.A-ANG	118dB	
WS		Ch2	Emergency WA-U		
	5 Warning sounds	Ch3	Ambulance PI-PO		
		Ch4	Machinery Fault		
		Ch5	High Expansion		
WP		Ch1	Fire.A-ANG	118dB	
	5 Special	Ch2	Abandon Alarm		
	Warning	Ch3	Machinery Fault		
	sounds	Ch4	High Expansion		
		Ch5	7 Short Pl. / 1 Long		
WM	5 Melodies	Ch1	Sweet Home	118dB	
		Ch2	For Elise		
		Ch3	Cuckoo's Waltz		
		Ch4	Piano Sonata		
		Ch5	Turkish March		
WA		Ch1	Beep Intermittent	116dB	
		Ch2	Door Chime		
	5 Alarms	Ch3	Phone Ring		
		Ch4	PI.PI.PI Short		
		Ch5	Tripping Beat		
WV	5 Customiz- able sounds	Ch1-Ch5	Available upon request (customized voice type)	113dB	


SHD2/ SHD2P 343 PROTECTION CAGE CABLE ENTRY 1/2*PF 4-Ø8.5 FITTING HOLES

Wiring Instructions for LC Type

LC type product with exposed sound selection signal line is avaliable upon request. Please refer to the diagram below for wiring.

SHD/ SHDP-DC/AC SHD2/ SHD2P-DC/AC

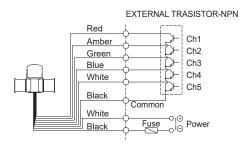

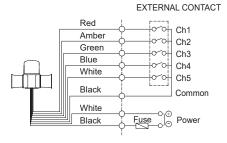


- External power line UL1015 AWG18(0.75sq) x 2C 400mm
- External signal line UL1007 AWG22(0.3sq) 400mm

Volume Adjustment




- The volume output of this product is adjustable.
- Turn the volume dial clockwise to increase the volume, and turn counter clockwise to decrease the volume.
- There will be no sound when the dial is put at MIN.

Terminal Box Wiring Instructions

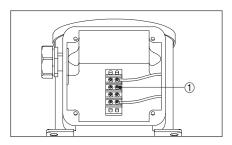

- Terminal block is located inside of the product. Unscrew the 4 bolts located in the upper body to get rid of the upper lighting element of the unit.
- Please apply fork (U-type) or ring (O-type) locking spade terminal at naked tip of the wire for secure connection.
- Please wire the power line to terminal ①
- For AC type products, wire regardless of polarity.
- For DC type products, wire terminal of black line to (-) polarity.

Parts Definition/Installation

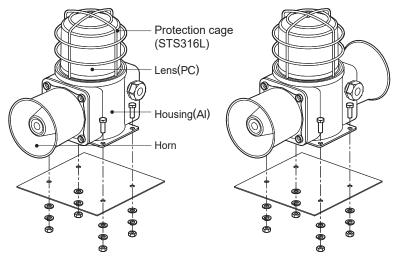


- First, machine holes on the mounting surface.
- The mounting hole of this product is 8.5mm in diameter.
- When machining taps, fasten the bolt through the mounting hole of the bracket.
- When machining holes, insert the bolt through the hole of the product, and tighten the nut from the opposite side of the mounting surface.
- When assembling using bolt and nut, please make sure to use flat washer and spring washer.


Mounting Hole Specifications/Light bulb Replacement Instructions

■ Mounting Hole Specifications

 Machine holes on the mounting surface referring to the diagram below.

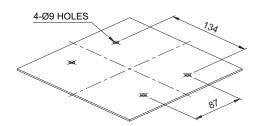


■ Bulb Replacement Instructions

 

- Please wait at least 1 minute after turning off the power before replacing the bulb.
- In order to dissemble the bulb, please push down the bulb(①) lightly and screw it counterclockwise.
- In order to put the bulb in to the unit, please place the bulb(①) in the socket(②) and screw it clockwise while lightly pushing down the bulb.

Installation Environment and Protection Rating

 - This product is designed for use with protection rating of IP66.
- If the product is installed in locations that subject it to excessive dust or water other than the designated IP protection rating indicated(IP66), it may cause malfunction or damage to the product.
- In case of outdoor applications, install the product in the upright position. Do not install the product horizontal or upsidedown positions where water can potentially penetrate into the product and impact it's operation.
- For further information, please visit our website (www.glight.com).



Specification and dimensions listed in this catalogue subject to change without notice for product quality improvement. The newest product information is available on our website.(www.qlight.com)

Please read the instruction manual attached to the product carefully before installation and use.

Qlight Co., Ltd. www.qlight.com | trade@qlight.com

Head Office | Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea

Tel. +82-2-2679-6152(Toll free. +82-80-328-2222) Fax. +82-2-2679-6154

Factory | 185-25, Mukbang-ro, Sangdong-myeon, Gimhae-si, Gyeongsangnamdo, Korea Tel. +82-55-328-1111(Toll free. +82-80-328-1111)

Qlight OverSEAs Sales Dept | 704 Nakdong-daero, Sasang-gu, Busan, Korea(Eomgung-Dong) Tel: +82-51-620-4100

Qlight Public Relations & Marketing Team Office | 704 Nakdong-daero, Sasang-gu, Busan, Korea(Eomgung-Dong) Tel. +82-51-245-0017

Qlight USA, Inc. www.qlight.com www.qlightusa.com | sales@qlightusa.com

3003 North First Street, Suite #341, San Jose, CA 95134 USA Tel. +1-408-519-5740 Fax. +1-408-519-5739

SHANGHAI Qlight Electronic Co., Ltd. www.qlight.com www.qlightcn.com | qlightcn@qlight.com

China Factory/ Shanghai Sales Office | #19, Nanda Road, Baoshan Area, Shanghai, China Tel. +86-21-6651-7100 Fax. +86-21-6315-3929 China Factory Site 2 (Qidong) | #33, Haiyan Road, Qidong High-tech Industrial Development Zone, Qidong, Jiangsu Province, China Tel +86-513-8384-9999 Fax +86-513-8384-9910



Product Operation Inquiry / Customer Support +82-51-620-4100

You can expect prompt service if you have exact information such as model name, symptom, telephone number and address.

**ALL PRODUCT, PRODUCT SPECIFICATIONS AND DATA ARE SUBJECT TO CHANGE WITHOUT NOTICE TO IMPROVE

RELIABILITY FUNCTION OR DESIGN OR OTHERWISE

RELIABILITY, FUNCTION OR DESIGN OR OTHERWISE.

Head office: Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea (Postal Code: 08507)

Factory: 185-25, Mukbang-Ro, Sangdong-Myeon, Gimhae-Si, Gyeongsangnam-Do, Korea (Postal Code: 50805)

www.qlight.com