



SELF ADHESIVE TIE MOUNTS

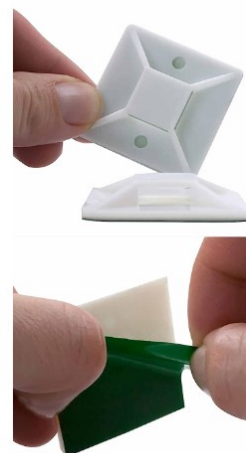


1. Pick up a base
2. Peel off backing
3. Stick to clean, dry surface
4. Insert cable tie

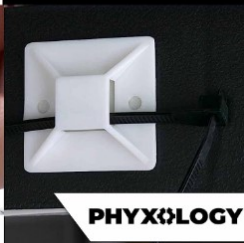

PHYXOLOGY

- Material: UL APPROVED NYLON 66 ,94v-2
- Certificate: UL ROHS CE SGS
- Usage: Used where hole-drilling is not allowed, easy and time-saving
- Color: Black or White
- Our self-adhesive cable tie mount contains strong adhesive glue, better peelability and stronger viscosity than the original. Lightweight, durable, and insulating.
- Simply peel off the backing paper, place the bases on a clean and dust-free surface for the best adhesion, then get the cable tie through the hole, locking teeth in the cable tie head secure cables with cable zip, and you can use it. You also can use the built-in screw hole for added strength.
- A cable tie mount has many kinds of styles to install. Some will need the screw to help.

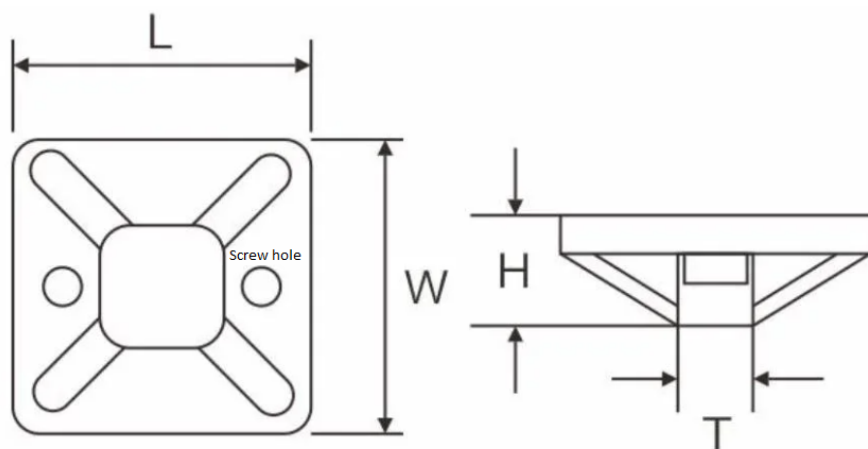

Item	Length (L)	Width (W)	Height (H)	Cable tie hole (T)	Screw hole (D)	Color
TM20	20 mm	20 mm	6.1 mm	5.0 mm	2.9 mm	BLACK/WHITE
TM25	25mm	25mm	7.5 mm	6.2 mm	3.5 mm	BLACK/WHITE
TM30	30mm	30mm	8.7 mm	6.4 mm	4.5 mm	BLACK/WHITE
TM40	40mm	40mm	6.4 mm	10.8 mm	-	BLACK/WHITE