

## LCD Counter &amp; Timer

## LC series

## USER'S MANUAL

Thank you for purchasing Hanyoung Nux products. Please read the instruction manual carefully before using this product, and use the product correctly. Also, please keep this manual where you can view it any time.

HANYOUNG NUX

HEAD OFFICE/  
FACTORY

HANYOUNGNEX CO.,LTD

28, Gilpa-ro 71beon-gil, Michuhol-gu, Incheon, Korea  
TEL : +82-32-876-4697 FAX : +82-32-876-4696  
http://www.hanyoungnux.com

## Safety information

Please read the safety information carefully before the use, and use the product correctly. The alerts declared in the manual are classified into Danger, Warning and Caution according to their importance

<b>⚠ DANGER</b>	Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury
<b>⚠ WARNING</b>	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury
<b>⚠ CAUTION</b>	Indicates a potentially hazardous situation which, if not avoided, may result in minor injury or property damage

**⚠ DANGER**

- The input/output terminals are subject to electric shock risk. Never let the input/output terminals come in contact with your body or conductive substances.

**⚠ WARNING**

- Any use of the product other than those specified by the manufacturer may result in personal injury or property damage.
- If there is a possibility that a malfunction or abnormality of this product may lead to a serious accident to the system, install an appropriate protection circuit on the outside.
- Since this product is not equipped with a power switch and fuse, install them separately on the outside (fuse rating: 250 VAC 0.5 A).
- Please supply the rated power voltage, in order to prevent product breakdowns or malfunctions.
- To prevent electric shocks and malfunctions, do not supply the power until the wiring is completed.
- The product does not have an explosion-proof structure, so avoid using it in places with flammable or explosive gases.
- Never disassemble, modify, process, improve or repair this product, as it may cause abnormal operations, electric shocks or fires.
- Please disassemble the product after turning OFF the power. Failure to do so may result in electric shocks, product abnormal operations or malfunctions.
- Please use this product after installing it to a panel, because there is a risk of electric shock.

**⚠ CAUTION**

- The contents of this manual may be changed without prior notification.
- Please make sure that the product specifications are the same as you ordered.
- Please make sure that there are no damages or product abnormalities occurred during shipment.
- Please use the product in places where corrosive gases (especially harmful gases, ammonia, etc.) and flammable gases are not generated.
- Please use the product in places where vibrations and impacts are not applied directly.
- Please use the product in places without liquids, oils, chemicals, steam, dust, salt, iron, etc.
- Please do not wipe the product with organic solvents such as alcohol, benzene, etc. (use neutral detergents).
- Please avoid places where large inductive interference, static electricity, magnetic noise are generated.
- Please avoid places with heat accumulation caused by direct sunlight, radiations, etc.
- Please use the product in places with elevation below 2000 m.
- When water enters, short circuit or fire may occur, so please inspect the product carefully.
- When there is a lot of noise from the power, we recommend to use insulation transformer and noise filter. Please install the noise filter to a grounded panel, etc. and make the wiring of noise filter output and power supply terminal as short as possible.
- Tightly twisting the power cables is effective against noise.
- Do not wire anything to unused terminals.
- Please wire correctly, after checking the polarity of the terminals.
- When you install this product to a panel, please use switches or circuit breakers compliant with IEC60947-1 or IEC60947-3.
- Please install switches or circuit breakers at close distance for user convenience.
- We recommend regular maintenance for the continuous safe use of this product.
- Some components of this product may have a lifespan or deteriorate over time.
- The warranty period of this product, is 1 year, including its accessories, under normal conditions of use.
- The preparation period of the contact output is required during power supply. If used as a signal to external interlock circuit, etc. please use a delay relay together.

## Model code

Model	Code	Content
LC	□ □ □ □ □ □	LCD Counter & Timer
Dimensions	3	96(W) × 48(H) mm
	4	48(W) × 48(H) mm
	6	72(W) × 36(H) mm
	7	72(W) × 72(H) mm
Settings	P	Preset Counter & Timer
Display digits	4	4 digits (9999) ※LC4 only
	6	6 digits (999999)
Control output	1	1-stage output
	2	2-stage output
Sub output	N	No sub output
	C	RS485 (MODBUS-RTU)
Power voltage	A	100 - 240 V a.c. 50/60 Hz
	D	24 - 48 V a.c. 50/60 Hz or 24 - 48 V d.c.

## Specifications

Model		LC3	LC4	LC6	LC7
Power voltage	AC	100 - 240 V a.c. 50/60 Hz (voltage fluctuation rate: ±10%)			
	DC	24 - 48 V a.c. 50/60 Hz or 24 - 48 V d.c. (voltage fluctuation rate: ±10%)			
Power consumption	AC	▪ 2-stage setting type: max. 12VA ▪ 1-stage setting type: max. 11VA			
	DC	▪ 2-stage setting type: max. 6W ▪ 1-stage setting type: max. 5W			
Character height	Counting unit (14.5 mm), Setting unit (10 mm)	▪ 6-digit : Counting unit (10.8 mm), Setting unit (8 mm) ▪ 4-digit : Counting unit (14 mm), Setting unit (8.5 mm)		Counting unit (10.5 mm), Setting unit (6.7 mm)	Counting unit (17.2 mm), Setting unit (12.5 mm)
		Max counting speed: 1 cps / 30 cps / 1 Kcps / 10 Kcps			
Power outage compensation	10 years (using non-volatile memory)				
Input	<ul style="list-style-type: none"> <li>Selection of input method by external switch (voltage input / non-voltage input)</li> <li>Counter: composed of CPI, CP2, RESET, BATCH -RESET</li> <li>Timer: composed of START, INHIBIT, RESET</li> <li>Voltage input: HIGH level (5 - 30 V d.c.), LOW level (0 - 2 V d.c.), input resistance (about 4.5 kΩ)</li> <li>Non-voltage input: impedance during short-circuit (max. 1 kΩ), residual voltage during short-circuit (max. 2 V d.c.)</li> </ul>				
Minimum input signal time	1 ms / 20 ms (START, INHIBIT, RESET inputs)				
External power supply	Max. 12 V d.c. 100 mA				
ONE SHOT output	0.01 ~ 99.99 SEC				
Control output	contact output	1-stage	OUT (SPDT, 1c)	OUT (SPST, 1a)	OUT (SPDT, 1c)
		2-stage	OUT1 (SPST, 1a), OUT2 (SPDT, 1c) * OUT2 of LC6-P62C: SPST configuration		
	contactless output	capacity	<ul style="list-style-type: none"> <li>SPDT: NC (250 V a.c. 2 A), NO (250 V a.c. 5 A), resistive load</li> <li>SPST: 250 V a.c. 5 A, resistive load</li> </ul>		
		1-stage	NPN 2 circuits (OUT, BAT.O), * LC4-P61C / P41C models NPN 1 circuit configuration		
capacity	2-stage	NPN 2 circuits (OUT1,OUT2)	-	NPN 2 circuits (OUT1,OUT2)	
	Open collector, max. 30 V d.c. 100 mA				
Timer operation error	Power start: max. ±0.01 % ±0.05 sec Reset start: max. ±0.01 % ±0.03 sec				
Communication	protocol	Modbus RTU			
	method	RS485 (2-wire half-duplex)			
	synchronism	Asynchronous			
	speed	2,400 / 4,800 / 9,600 / 19,200 / 38,400 bps			
	effective distance	Max. within 800 m			
	max. connections	31 (address : 1 ~ 127)			
	response waiting time	5 ~ 99 ms			
START BIT	1 bit (fixed)				
STOP BIT	1 bit (fixed)				
DATA BIT	8 bit				
PARITY BIT	None / Odd / Even				
Insulation resistance	Min. 100 MΩ (500 V d.c.) conductive part terminal - unfilled metal				
Dielectric strength	2000 V a.c. 60 Hz for 1 minute (different live part terminals)				
Noise immunity	Square-wave noise by noise simulator ±2000 V (pulse width 1 μs)				
Shock resistance	300 m/s <sup>2</sup> (30G), 3 times each in X, Y and Z direction				
Vibration durability	10 - 55 Hz, single amplitude 0.5 mm, 3-axis each direction, 2 h				
Relay life	electrical	Min. 50,000 times			
	mechanical	Min. 10,000,000 times			
Degree of protection	IP66 (product front)				
Storage temperature	-25 ~ 65 °C (without condensation)				
Ambient temperature & humidity	-10 ~ 55 °C, 35 ~ 85 % RH (without condensation)				
Weight(g)	196	140	143	222	


# Maximum counting speed

The maximum counting speed is the maximum response speed when you input the duty ratio (ON / OFF ratio) of the count input signal as 1: 1.


- Even when the input signal is below the maximum counting speed, it may not be counted if the ON and OFF times are less than the specified minimum signal width.
- Minimum signal time.

Counting speed	Minimum signal time
1 cps	500 ms
30 cps	16.7 ms
1 Kcps	0.5 ms
10 Kcps	0.05 ms

※ The minimum signal time refers to ON and OFF times.




# Power supply

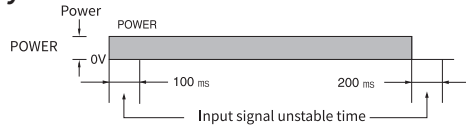

Since the rise and fall time of internal power and external output power is 100 ms after power on and 200 ms after power off, it does not operate in unstable time to prevent malfunction due to unsafe output operation of external sensor

- Apply the signal 100 ms after power on.
- Apply power 200 ms after power off.

# Part names and functions

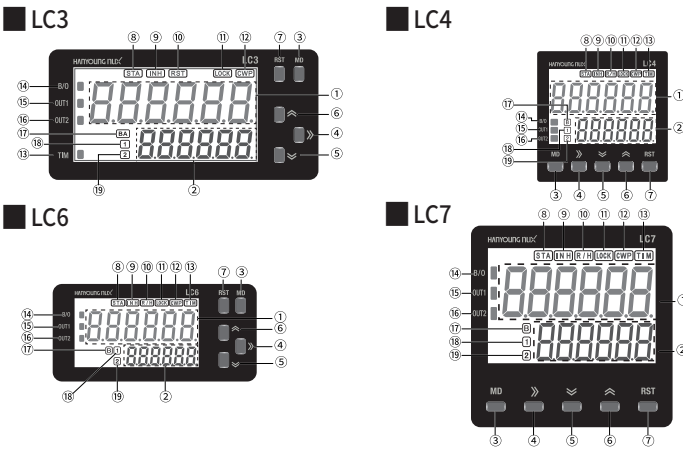


- PV display: displays count value, time value, batch count value, setting item
- SV display: displays counter / timer / batch set value
- MODE KEY: enters and quits function mode (auto save function set value during termination) : used to switch the SV display in operation mode (1-stage/2-stage set values/batch set value)
- SHIFT KEY: enters set value change mode and shifts the set value digits : enters communication setting mode in function mode
- DOWN KEY: reduces set value in function mode and set value change mode
- UP KEY: increases set value in function mode and set value change mode
- RESET KEY: resets count value, time value and output status
- START input indicator: illuminates when external START signal is applied in timer operation mode
- INHIBIT input indicator: illuminates when external INHIBIT signal is applied in timer operation mode
- RESET input indicator: illuminates when external RESET signal is applied
- LOCK set indicator: illuminates when LOCK is set
- Communication write inhibit indicator: illuminates when communication write inhibit is set, flashes during timing operation
- Timer setting indicator: illuminates when TIM/TTIM/BTIM operation mode is set,
- BATCH output indicator: illuminates during BATCH output operation
- OUT1 output indicator: illuminates during OUT1 output operation
- OUT2 output indicator: illuminates during OUT2 output operation
- BATCH setting indicator: illuminates when switching SV display to BATCH set value
- OUT1 setting indicator: illuminates when switching SV display to 1-stage set value
- OUT2 setting indicator: illuminates when switching SV display to 2-stage set value

# Operation modes

Display	Operation mode	Description
$Cnt$	Preset counter	According to input mode, it adds, subtracts, add/subtracts and counts the pulses applied to external input CP1 /CP2. When the count value reaches the 1- and 2-stage set values, the OUT1 and OUT2 are operated according to the selected output mode.
$bCnt$	Batch counter	The batch output is activated when the batch count value reaches the batch set value, after counting the count-ups of the counter.
$t \bar{in}$	Timer	When a signal is applied to the external input START / INHIBIT / RESET, the operation time is displayed according to time range. OUT1 and OUT2 outputs are operated according to the selected output mode when the time value reaches the 1- and 2- stage set values.
$t \bar{t} \bar{in}$	Twin timer	OUT1 and OUT2 outputs are turned ON / OFF according to ON and OFF set times. (OUT output is operated in 1-stage model, OUT1 and OUT2 outputs are operated in 2-stage model simultaneously).
$b \bar{t} \bar{in}$	Batch timer	The batch output is activated when the batch count value reaches the batch set value, after counting the time-ups of the timer.

\* The batch count value can be initialized by pressing the front reset button in the batch count value display mode or by applying a signal to the batch reset terminal.

# Function mode configuration

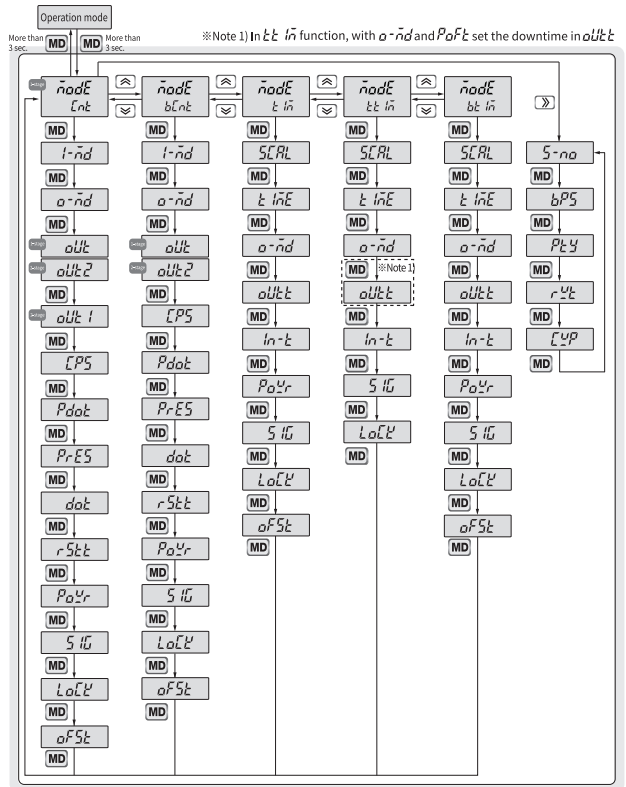


# Counter function modes

Display	Name	Settings	Display condition	Initial value
$Cnt$	Operation mode	$Cnt \rightarrow bCnt \rightarrow t \bar{in} \rightarrow t \bar{t} \bar{in} \rightarrow b \bar{t} \bar{in}$ Preset counter Batch counter Twin timer Batch timer * In operation mode setting, you can set the communication function by pressing $\llbracket \gg \rrbracket$ key	Counter	$Cnt$
$i \bar{nd}$	Input mode	$U-A \rightarrow U-b \rightarrow U-Ab \rightarrow d-A \rightarrow d-b \rightarrow d-Ab \rightarrow UP-A \rightarrow UP-B \rightarrow UP-AB \rightarrow DOWN-A \rightarrow DOWN-B \rightarrow DOWN-AB \rightarrow Ud-A \rightarrow Ud-b \rightarrow Ud-C \rightarrow Ud-d \rightarrow Ud-E \rightarrow Ud-F \rightarrow UP/DOWN \rightarrow UP/DOWN \rightarrow UP/DOWN \rightarrow UP/DOWN \rightarrow UP/DOWN \rightarrow UP/DOWN \rightarrow A \rightarrow B \rightarrow C \rightarrow D \rightarrow E \rightarrow F$	Counter	$U-A$
$o \bar{nd}$	Output mode	$n \rightarrow F \rightarrow C \rightarrow R \rightarrow P \rightarrow q \rightarrow A \rightarrow N \rightarrow F \rightarrow C \rightarrow R \rightarrow K \rightarrow P \rightarrow Q \rightarrow A$	Counter	$F$
$oUt2$	OUT2/OUT output time	*Sets OUT2 or OUT output time *You cannot set to 00.00 in some output modes $0000 \sim 9999$ 00.00 99.99	2-stage setting 1-stage setting	$0000$
$oUt1$	OUT1 output time	*Sets OUT1 output time $Hold \sim 9999$ HOLD 99.99	2-stage setting	$Hold$
$CP5$	Counting speed	*Sets max counting speed (when duty ratio is 1:1) $1 \rightarrow 30 \rightarrow 1K \rightarrow 10K \rightarrow 1 \rightarrow 30 \rightarrow 1K \rightarrow 10K$	Counter	$30$
$Pdok$	Pre-scale decimal point	*Up to 5 decimal places can be set $00000 \rightarrow 00000 \rightarrow 00000 \rightarrow 00000 \rightarrow 00000 \rightarrow 00000$ 0.00000 00.0000 000.0000 0000.00 00000.0	Counter	$000000$
$PrES$	Pre-scale	$000001 \sim 999999$ 0.00001 999999	Counter	$001000$
$dok$	Decimal point	※ Decimal point display cannot be more than prescale one $00000 \rightarrow 00000 \rightarrow 00000 \rightarrow 00000 \rightarrow 00000 \rightarrow 00000$ 0.00000 00.00000 000.0000 0000.00 00000.0 000000	Counter	$000000$
$rStt$	Reset time	$1ms \rightarrow 20ms$ 1 ms 20 ms	Counter	$20ms$
$POUr$	Power outage memory	*SAVE (saves count value), CLEAR (resets count value) $SAVE \rightarrow CLEAR \rightarrow SAVE \rightarrow CLEAR$	Counter	$CLEr$
$S \bar{In}$	Show input logic	*Shows NPN/PNP input selection status of side dip switch $nPn \rightarrow PnP \rightarrow NPN \rightarrow PNP$	Counter	$nPn$
$LoCK$	Key lock	$LoFF \rightarrow LoN \rightarrow LSEt \rightarrow Lr5t \rightarrow LOCK \rightarrow LOCK \rightarrow LOCK \rightarrow LOCK$ OFF ON SET RESET	Counter	$LoFF$
$oFSt$	Offset	*Available only in UP mode, it counts from the set offset value ※ It cannot be used with the twin timer. $000000 \sim 999999$ 000000 999999	Counter	$000000$

# Counter input actions

A shall be above the minimum signal width, and B above 1/2 of the minimum signal width

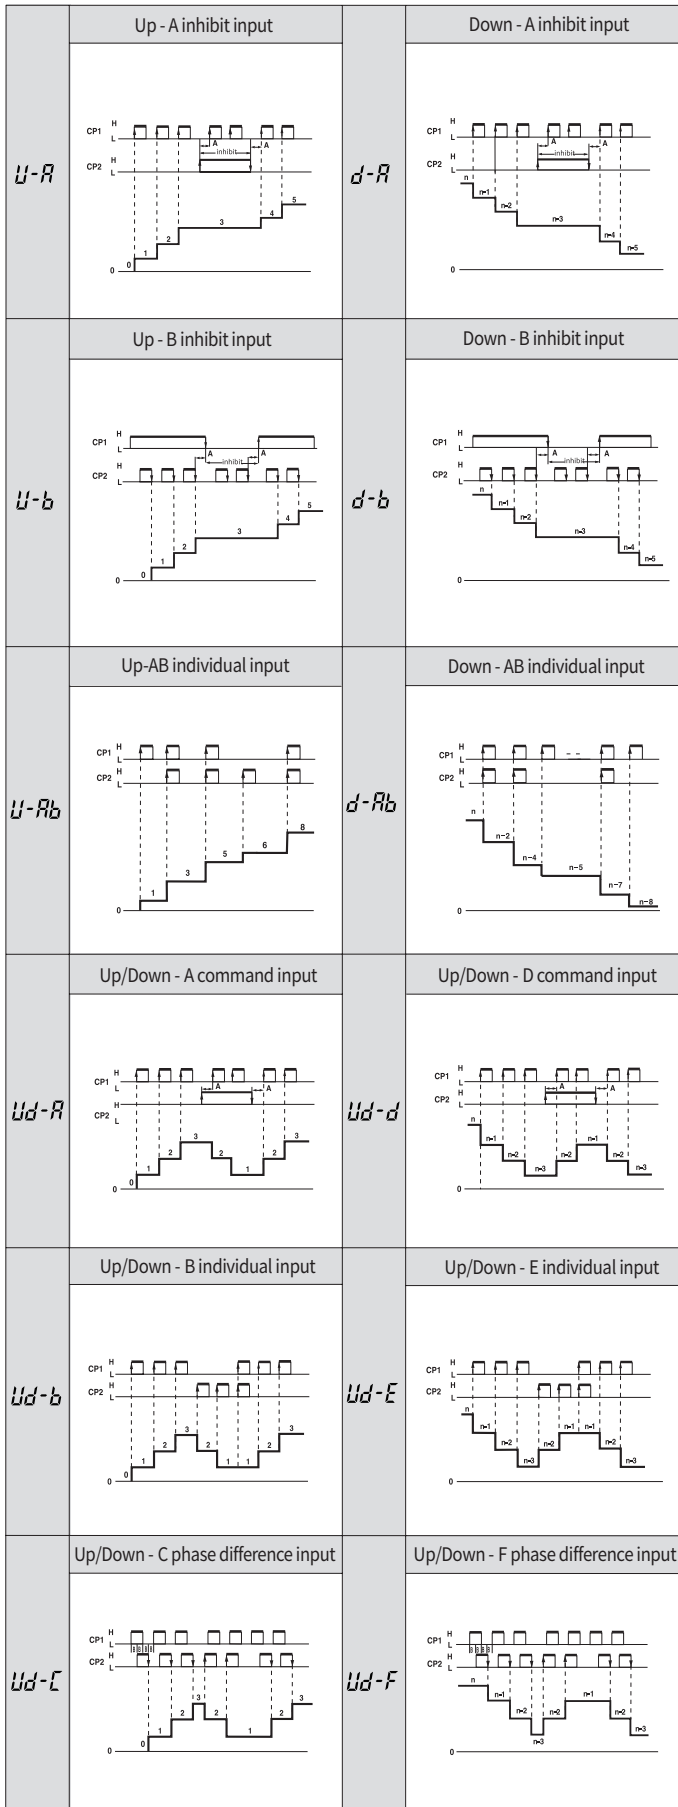


• Use *Ud-C*, *Ud-F* with an incremental encoder.  
 Note) The timing diagram above is for when the input logic is set to 'PNP' mode.

# Input/output connection


## Input logic selection (voltage / non-voltage)

1. After turning off the power, check the NPN / PNP display on case top and operate the transfer switch.
2. You can check the input logic setting status in the function setting mode.

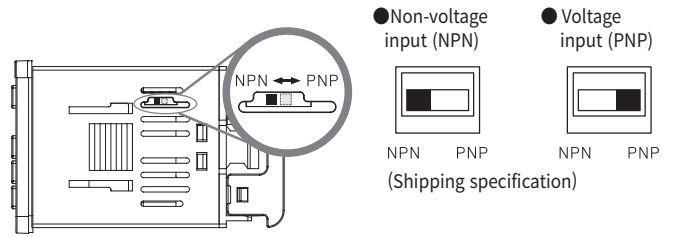


## Input connection

- When non-voltage input (NPN) is selected

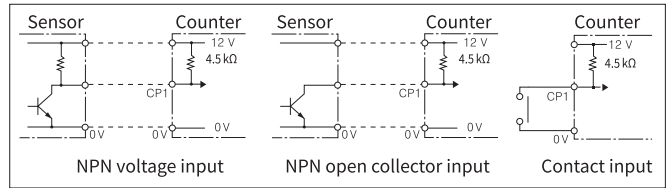


- When voltage input (PNP) is selected

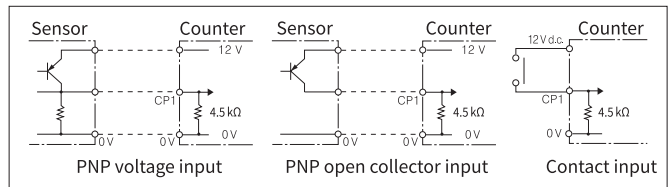

## Output connection


### • Example of contactless (transistor) output

Since internal circuit and contactless output are isolated, please use same as GND. For the contactless output, select the power supply for the load and the load, in order not to exceed the maximum of 30 V 100 mA.

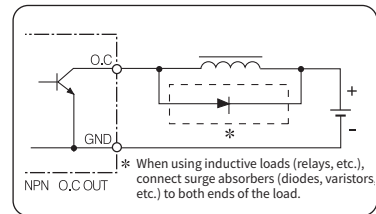

### • Example of contact output

Because the contact capacity is 250 V a.c. NO 3 A, NC 2 A (load resistance) make sure that the transient current does not flow at the contact. The wiring follows the normal wiring method.

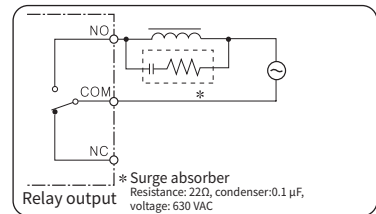


## Key lock level selection (LOCK)

Key lock level selection	Description
LoFF	Unlocks all keys
Lon	Locks all keys (except MODE key)
LSEt	Locks set value input (SHIFT) key
LrSt	Locks reset (RST) key

# Counter output modes


※ In case of 1-stage model, it is operated as SET2 and OUT2.

※ Apply a reset signal to the front reset (RST) key or external RESET terminal.



Output mode	Input mode			Operation
	UP	DOWN	UP/DOWN/A, B, C	
<b>n</b>				When the count reaches the set value, the count stops and the displayed value is held. OUT2 output is held. Count value, display value and output are initialized during reset input.
<b>F</b>				Even when the count value reaches the set value, the count is displayed continuously increasing or decreasing. OUT2 output is maintained. Count value, display value and output are initialized during reset input.
<b>L</b>				When the count value reaches the set value, the count is displayed continuously increasing or decreasing after initialization. OUT2 output turns off after one-shot output during the set time. The self-holding output of OUT1 turns off together with OUT2 output. The one-shot output of OUT1 turns off after the OUT1 output setting time, regardless of OUT2 output. Count value, display value and output are initialized during reset input.
<b>r</b>				When the count value reaches the set value, the count is displayed after stop during the OUT2 output setting time. After the OUT2 output setting time, it is displayed incrementally or decrementally after initialization. OUT2 output turns off after one-shot output during the set time. The self-holding output of OUT1 turns off together with OUT2 output. The one-shot output of OUT1 turns off after the OUT1 output setting time, regardless of OUT2 output. Count value, display value and output are initialized during reset input.
<b>u</b>				When the count value reaches the set value, the count is displayed incrementally or decrementally. OUT2 output turns off after one-shot output during the set time. The self-holding output of OUT1 turns off together with OUT2 output. The one-shot output of OUT1 turns off after the OUT1 output setting time, regardless of OUT2 output. Count value, display value and output are initialized during reset input.
<b>p</b>				When the count value reaches the set value, the count is displayed incrementally or decrementally after initialization. The count value display stops during OUT2 output setting time, and the increased or decreased count value is displayed after the OUT2 output setting time. OUT2 output turns off after one-shot output during the set time. The self-holding output of OUT1 turns off together with OUT2 output. The one-shot output of OUT1 turns off after the OUT1 output setting time, regardless of OUT2 output. Count value, display value and output are initialized during reset input.
<b>q</b>				When the count value reaches the set value, after OUT2 output setting time, the count is displayed incrementally or decrementally after initialization. OUT2 output turns off after one-shot output during the set time. The self-holding output of OUT1 turns off together with OUT2 output. The one-shot output of OUT1 turns off after the OUT1 output setting time, regardless of OUT2 output. Count value, display value and output are initialized during reset input.
<b>R</b>				When the count value reaches the set value, the count stops and the display value is held. OUT2 output turns off after one-shot output during the set time. The self-holding output of OUT1 turns off together with OUT2 output. The one-shot output of OUT1 turns off after the OUT1 output setting time, regardless of OUT2 output. Count value, display value and output are initialized during reset input.

## Batch counter

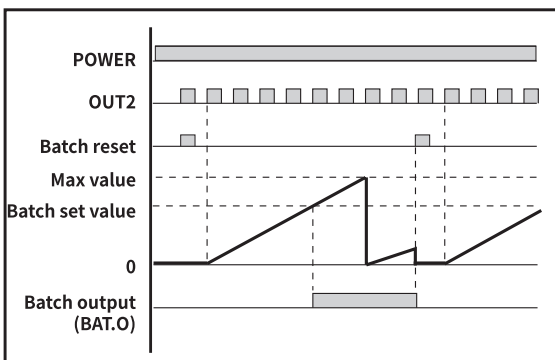


### Batch counter operation

- The batch count value increases during OUT2 output operation (increase during OUT output operation in 1-stage model)
- Batch output (B/O) is operated when the batch count value is greater than the batch set value.
- Batch count values and batch outputs are initialized by pressing the front **RST** key in batch display mode or by applying a signal to the external BRST terminal.
- Even in batch display mode, the counting operation continues.
- If the batch count value is '999999 or more, it is initialized to '0' and counted.


# View and change counter set value

- If you press **MD** in counter operation mode, SET1 or SET2 set value is displayed in SV display sequentially.
- To change the set value, select the SET1 or SET2 set value to change with **MD**, then press **↔** to enter set value change mode.
- If you enter the set value change mode, the set value will flash and you can change the set value with **↔** / **↵** / **⏏**.
- After changing the set value, use **MD** to save the changed set value.
- Without key inputs for 1 minute in set value change mode, it returns to operation mode with the value set before change, without saving.
- For 1-stage models, the set value is not changed. (It is fixed as **2** on the display part.)

## Counter set value change (2-stage output model)

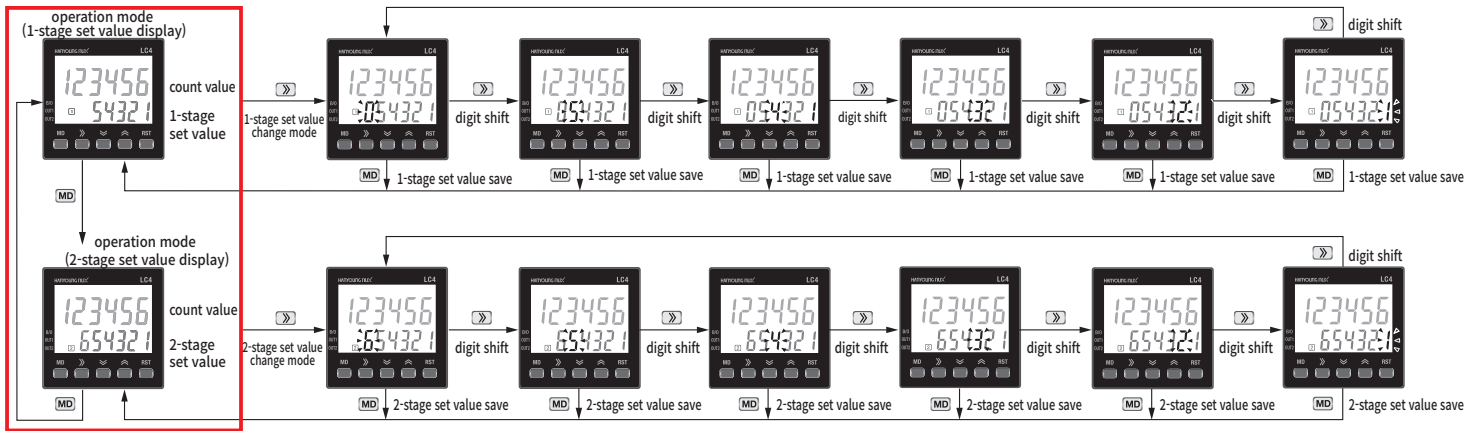

## Batch counter set value and batch set value change

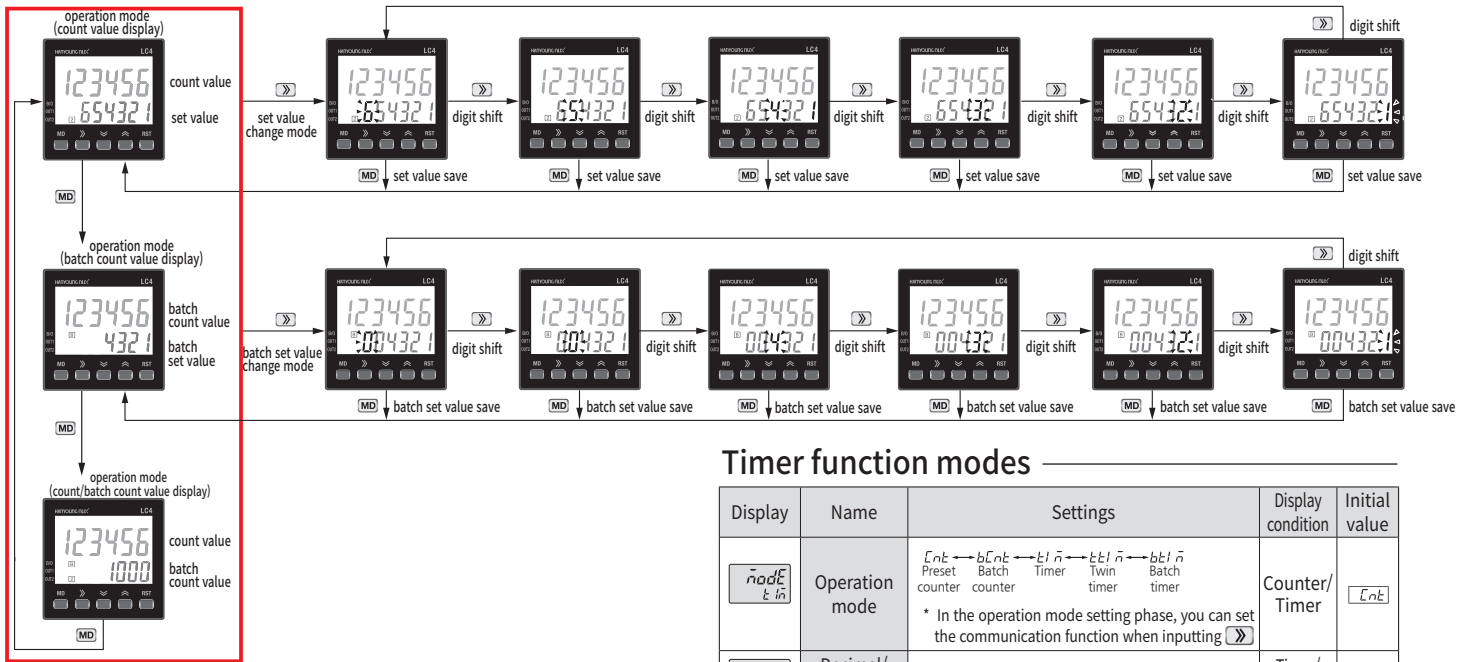

## Batch set value change

1. In operation mode, use **MD** to switch to batch count value display mode.
2. In batch count value display mode, use **↔** to switch to batch set value change mode.
3. In batch set value input mode, use **↔**, **↵**, **⏏** to change the batch set value to "4321" (when setting the batch set value to "4321").
4. After changing the batch set value, press **MD** to save the changed batch set value.
5. In the count value / batch count value display modes, you can change the set value and batch set value.

## Time ranges

Range selection display		4-digit time range		6-digit time range	
UP	DOWN	Decimal notation	Sexagesimal notation	Decimal notation	Sexagesimal notation
<b>UD 15</b>	<b>dD 15</b>	99.99 s	59.99 s	9999.99 s	59 m 59.99 s
<b>U 15</b>	<b>d 15</b>	999.9 s	9 m 59.9 s	99999.9 s	9 h 59 m 59.9 s
<b>U 15</b>	<b>d 15</b>	9999 s	59 m 59 s	999999 s	99 h 59 m 59 s
<b>U 1h</b>	<b>d 1h</b>	9999 m	99 h 59 m	999999 m	9999 h 59 m
<b>U 1H</b>	<b>d 1H</b>	9999 h	99 d 23 h	999999 h	9999 d 23 h


※ s: seconds m: minutes h: hours d: days

## Timer function modes

Display	Name	Settings	Display condition	Initial value
<b>mode</b> t in	Operation mode	EnE → bEnE → t1 n → t1 n → bE1 n Preset Batch Timer Twin Batch counter counter timer timer * In the operation mode setting phase, you can set the communication function when inputting <b>↔</b>	Counter/Timer	EnE
<b>SCALE</b> 60	Decimal/sexagesimal	10 → 60 10 60	Timer/twin timer	60
<b>t inE</b> UD 15	Time range	UD 15 → U 15 → U 15 → U 1h → U 1H → U.01s U.1s U.1m U.1h d 1H → d 1h → d 15 → d 15 → dD 15 D.1h D.1m D.1s D.1s D.01s	Timer/twin timer	UD 15
<b>a n d</b> Pond	Output mode	Pond → SOND → SOFD → SINT → SADD → SOND POND SOND SOFD SINT SADD SOND SOn 1 → S InE → SFLK → SF-R → SF-P → SF-Q S.ON1 S.INT S.FLK S.F-R S.F-P S.F-Q	Timer	Pond
<b>a n d</b> Pond	Output mode	Pond → POFd → POFt → SOND → SOFD POND POFD POFt S.OND S.OFD	Twin timer	
<b>oUtE</b> HoLd	Output time	*Not displayed in some twin timer operation modes HoLd ~ 9999 HOLD 99.99	Timer	HoLd
<b>in-t</b> inS	Minimum input signal time	*Select input terminal min input time (START,INHIBIT,RESET) inS → 20n5 1 ms 20 ms	Timer/twin timer	20n5
<b>Power</b> SRoE	Power outage memory	*SAVE (save time value), CLEAR (reset time value) SRoE → CLER SAVE CLEAR	Timer	CLER
<b>S In</b> nPN	Input logic display	nPN → PnP NPN PNP	Timer/twin timer	nPN
<b>LoFF</b> LoFF	Key lock	LoFF → Lon → LSEt → LrSE LOCK LOCK LOCK OFF ON SET RESET	Twin timer	LoFF
<b>oFSE</b> 000000	Offset	*Only in UP mode, display from set offset value 000000 ~ 999999 000000 999999 Note) Can not be used with twin timer.	Timer	000000

# Timer output modes

One shot output (0.01 s ~ 99.99 s)



	Output mode	Operation description
<b>POnd</b>	<b>Power RUN - ON delay</b>	<ul style="list-style-type: none"> <li>Time is displayed at the same time as power is on</li> <li>During time-up, OUT2 output turns ON and the time value is held</li> <li>Time value and output are initialized during reset input</li> </ul>
	<b>Signal RUN - ON delay</b>	<ul style="list-style-type: none"> <li>Time is displayed at the same time as external START signal is applied</li> <li>During time-up, OUT2 output turns ON and the time value is held</li> <li>Time value and output are initialized when external START signal is OFF</li> <li>Time value and output initialized during reset input</li> </ul>
<b>SOnd</b>	<b>Signal RUN - OFF delay</b>	<ul style="list-style-type: none"> <li>OUT2 output ON at the same time as external START signal is applied</li> <li>Time is displayed when external START signal is OFF</li> <li>During time-up, time value and OUT2 output are initialized</li> <li>Time value and output initialized during reset input</li> </ul>
	<b>Signal RUN - Interval</b>	<ul style="list-style-type: none"> <li>OUT2 output turns ON and time is displayed at the same time as external START signal is applied</li> <li>During time-up, time value and OUT2 output are initialized</li> <li>Time value and output are initialized when external START signal is OFF</li> <li>Time value and output initialized during reset input</li> </ul>
<b>SOAdd</b>	<b>Signal RUN - Addition</b>	<ul style="list-style-type: none"> <li>Time is displayed only while external START signal is applied</li> <li>During time-up, OUT2 output turns ON and the time value is held</li> <li>It maintains time value until reset input</li> <li>Time value and output initialized during reset input</li> </ul>
	<b>Signal START - ON delay</b>	<ul style="list-style-type: none"> <li>Time is displayed at the same time as external START signal is applied</li> <li>During time-up, OUT2 output turns ON and the time value is held</li> <li>Time value and output initialized during reset input</li> </ul>


	Output mode	Operation description
<b>SOon I</b>	<b>Signal START - ON delay1</b>	<ul style="list-style-type: none"> <li>Time is displayed at the same time as external START signal is applied</li> <li>During time-up, OUT2 output turns ON and the time value is held</li> <li>Time value and output initialized during reset input</li> </ul>
	<b>Signal START - Interval</b>	<ul style="list-style-type: none"> <li>OUT2 output turns ON and time is displayed at the same time as external START signal is applied</li> <li>During time-up, time value and OUT2 output are initialized</li> <li>Time value and output are initialized when external START signal is OFF</li> <li>Time value and output initialized during reset input</li> </ul>
<b>SFLY</b>	<b>Signal START - Flicker</b>	<ul style="list-style-type: none"> <li>Time is displayed at the same time as external START signal is applied</li> <li>During time-up, the time is displayed continuously after OUT2 output turns ON, and the time value is initialized</li> <li>After the external START signal is applied it shows the time according to SET2 set time and repeats the OUT2 output ON/OFF operation</li> <li>If OUT2 output is one-shot, OUT2 output turns OFF after OUT2 output set time</li> <li>Time value and output are initialized during reset input</li> </ul>
	<b>Signal START - Flicker_R</b>	<ul style="list-style-type: none"> <li>Time is displayed at the same time as external START signal is applied</li> <li>During time-up, OUT2 output turns ON and the time value is held</li> <li>Time value initializes and OUT2 output turns OFF after OUT2 output set time</li> <li>After the external START signal is applied it shows the time according to SET2 set time and repeats the OUT2 output ON/OFF operation</li> <li>Time value and output are initialized during reset input</li> </ul>
<b>SF-P</b>	<b>Signal START - Flicker_P</b>	<ul style="list-style-type: none"> <li>Time is displayed at the same time as external START signal is applied</li> <li>During time-up, OUT2 output ON and time value is initialized (however, the time display value is held)</li> <li>Time value is displayed and OUT2 output turns OFF after OUT2 output set time</li> <li>After the external START signal is applied it shows the time according to SET2 set time and repeats the OUT2 output ON/OFF operation</li> <li>Time value and output are initialized during reset input</li> </ul>
	<b>Signal START - Flicker_Q</b>	<ul style="list-style-type: none"> <li>Time is displayed at the same time as external START signal is applied</li> <li>During time-up, OUT2 output ON and displayed continuously</li> <li>Time value is initialized and OUT2 output turns OFF after OUT2 output set time</li> <li>After the external START signal is applied it shows the time according to SET2 set time and repeats the OUT2 output ON/OFF operation</li> <li>Time value and output are initialized during reset input</li> </ul>

# Twin timer output modes

Output mode	Operation description
<b>Power RUN - ON delay</b> 	<ul style="list-style-type: none"> <li>OFF time (SET1) is displayed at the same time as power is on</li> <li>During OFF time (SET1) time-up, OUT1 and OUT2 outputs turn ON, and ON time (SET2) is displayed after time value initialization</li> <li>During ON time (SET2) time-up, OUT1 and OUT2 outputs turn OFF, and OFF time (SET1) is displayed after time value initialization</li> <li>After supplying the power OUT1 and OUT2 outputs repeat ON/OFF operation according to SET1 and SET2 set times</li> <li>Time value and output initialized during reset input</li> </ul>
<b>Power RUN - OFF delay</b> 	<ul style="list-style-type: none"> <li>OUT1 and OUT2 outputs turn on and ON time (SET1) is displayed at the same time as power is on</li> <li>During ON time (SET1) time-up, OUT1 and OUT2 outputs turn OFF, and OFF time (SET2) is displayed after time value initialization</li> <li>During OFF time (SET2) time-up, OUT1 and OUT2 outputs turn ON, and ON time (SET1) is displayed after time value initialization</li> <li>After supplying the power OUT1 and OUT2 outputs repeat ON/OFF operation according to SET1 and SET2 set times</li> <li>Time value and output initialized during reset input</li> </ul>
<b>Signal START - ON delay</b> 	<ul style="list-style-type: none"> <li>OFF time (SET1) is displayed at the same time as external START signal is applied</li> <li>During OFF time (SET1) time-up, OUT1 and OUT2 outputs turn ON, and ON time (SET2) is displayed after time value initialization</li> <li>During ON time (SET2) time-up, OUT1 and OUT2 outputs turn OFF, and OFF time (SET1) is displayed after time value initialization</li> <li>After the external START signal is applied, OUT1 and OUT2 outputs repeat ON/OFF operation according to SET1 and SET2 set times</li> <li>Time value and output are initialized during reset input</li> </ul>
<b>Signal START - OFF delay</b> 	<ul style="list-style-type: none"> <li>OUT1 and OUT2 outputs turn ON and ON time (SET1) is displayed at the same time as external START signal is applied</li> <li>During ON time (SET1) time-up, OUT1 and OUT2 outputs turn OFF, OFF time (SET2) displayed after time value initialization</li> <li>During OFF time (SET2) time-up, OUT1 and OUT2 outputs turn ON, and ON time (SET1) is displayed after time value initialization</li> <li>After the external START signal is applied, OUT1 and OUT2 outputs repeat ON/OFF operation according to SET1 and SET2 set times</li> <li>Time value and output are initialized during reset input</li> </ul>

Output mode	Operation description
<b>Power RUN - Flicker_P</b> 	<ul style="list-style-type: none"> <li>While power is on, OUT1 output is ON and OUT1 ON time (SET1) is displayed</li> <li>During OUT1 ON time (SET1) time-up, OUT1 output is OFF and downtime (t) is displayed after time value initialization</li> <li>OUT2 output turns on after the downtime (t), and OUT2 ON (SET2) time is displayed after time value initialization</li> <li>OUT2 output turns off ON during OUT2 ON time (SET2) time-up, and the downtime (t) is displayed after time value initialization</li> <li>After power-on, OUT1 and OUT2 output repeat ON / OFF operations according to SET1 and SET2, t set time</li> <li>Time value and output initialization during reset input</li> <li>Available in 2-stage models</li> </ul>

## Batch timer

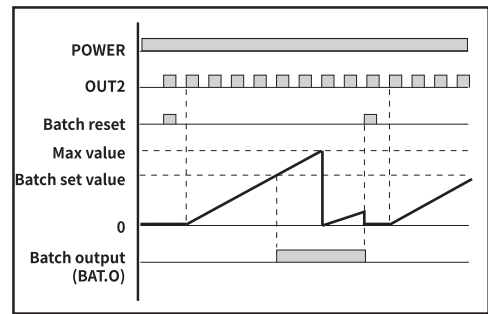

### Batch timer operation

- The batch count value increases during OUT2 output operation.
- Batch output (B/O) is operated when the batch count value is greater than the batch set value.
- Batch count value and batch output are initialized by pressing the front **RS** key in batch display mode or by applying a signal to the external BRST terminal.
- Even in batch display mode, counting operation continues.
- If the batch count value is '999999 or more, it is initialized to '0' and counted.


### Instantaneous output operation

- When batch set value is set to '0', batch output (BAT.O) is operated as instantaneous output (BAT.O LED illuminates)


## View and change timer set value

- If you press **MD** in timer operation mode, SET1 or SET2 set value will be displayed in SV display sequentially.
- If you want to change the set value, select SET1 or SET2 set value to change with **MD** and press **MD** to enter set value change mode.
- If you enter the set value change mode, the set value will flash, and you can change the set value using **←** / **→** / **↵**.
- After changing the set value, use **MD** to save the changed set value.
- If there is no key input for 1 minute in set value change mode, it returns to operation mode with the value set before change, without saving.
- In case of 1-stage model, set value does not change (it is fixed as **2** on the display part).
- In the twin timer, the ON and OFF times must be set together regardless of 1 or 2-stage models.

### Timer set value change mode (2-stage output model)

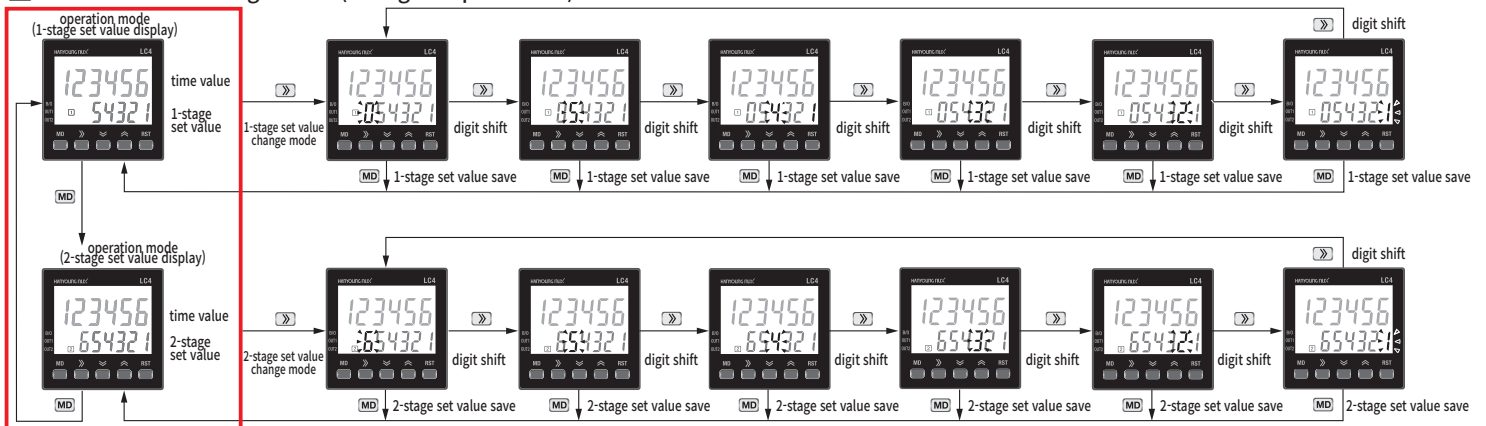


## Batch timer set value and batch set value change

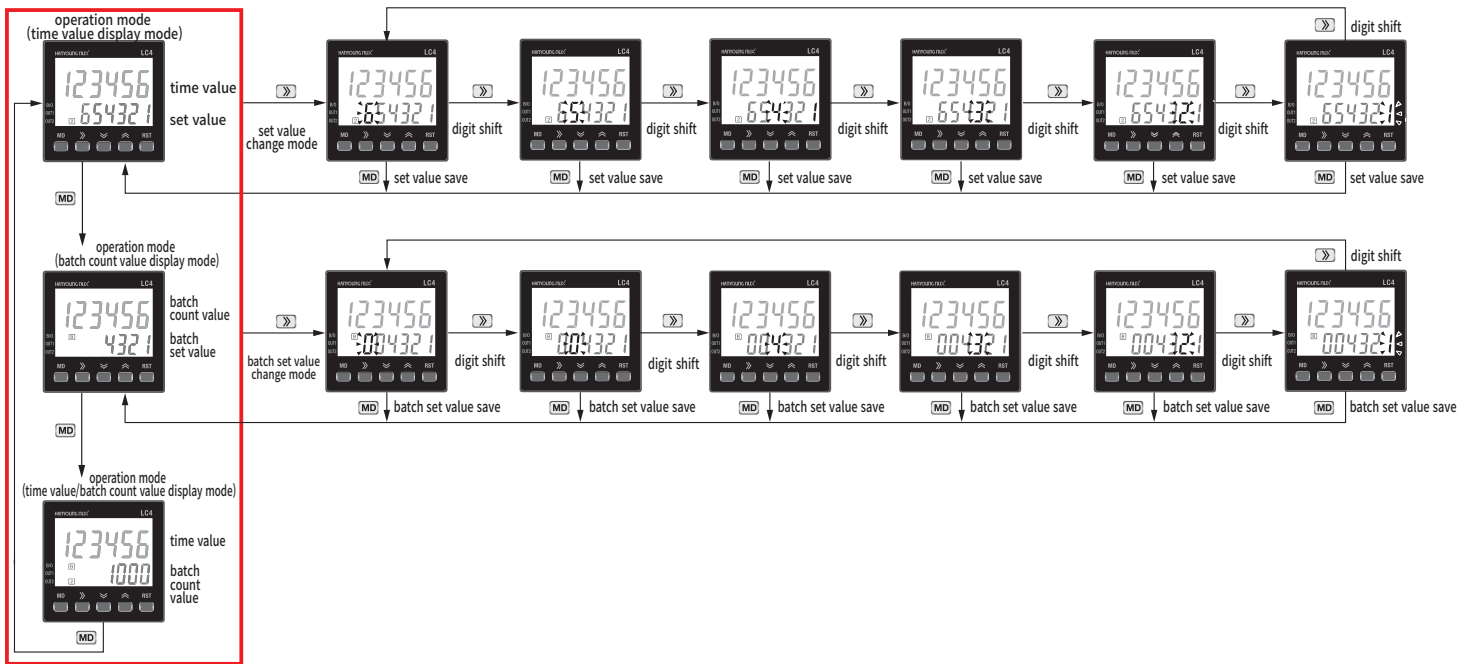

### ※ Batch set value change

1. In operation mode, use **MD** to switch to batch count value display mode.
2. In batch count value display mode, use **→** to switch to batch set value change mode.
3. In batch set value change mode, use **→**, **←**, **↔** to change the batch set value to '4321' (when setting the batch set value to '4321')
4. After changing the batch set value, press **MD** to save the changed batch set value.

## Twin timer ON time and OFF time set value change mode

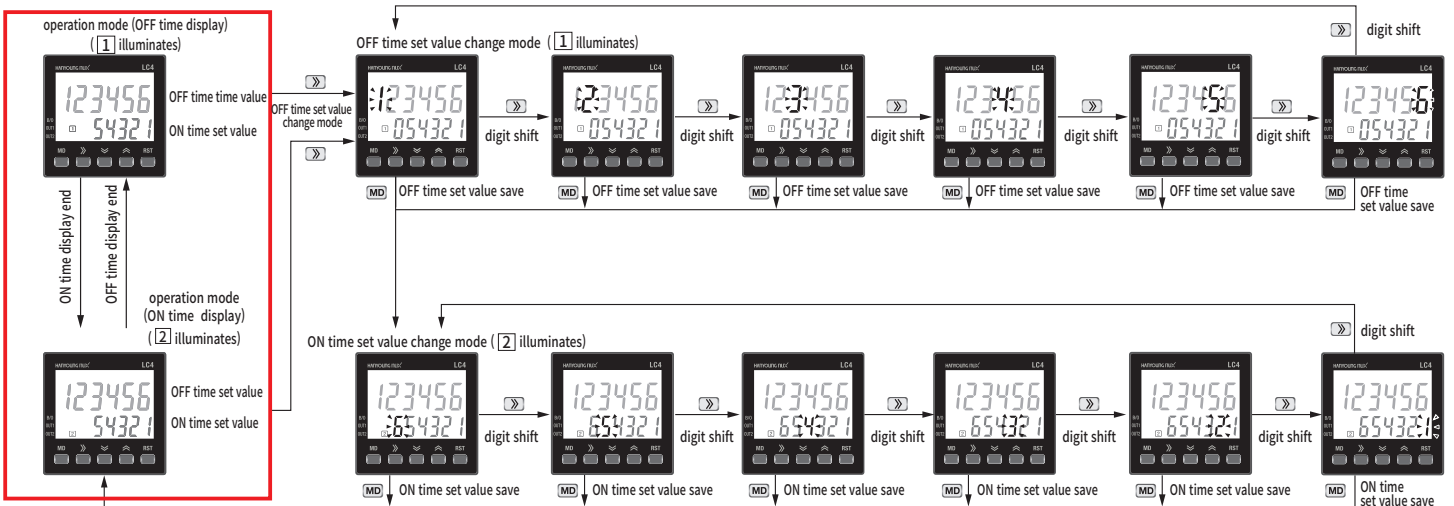


### View and change twin timer ON / OFF time set value

1. SET1 set value is displayed on PV display, SET2 set value is displayed on SV display.
2. During  $P_{on}$  /  $S_{on}$  output mode, OFF time is set on PV display, and ON time is set on SV display.
3. During  $P_{of}$  /  $S_{of}$  output mode, ON time is set on PV display, and OFF time is set on SV display.
4. During  $P_{ofE}$  output mode, OUT1-ON time is set on PV display, and OUT2-ON time is set on SV display.

※ When entering the twin timer ON / OFF time set value change mode, the timer stops, and when disabling the set value change mode, the timer displays from the stopped time.




# Communication configuration

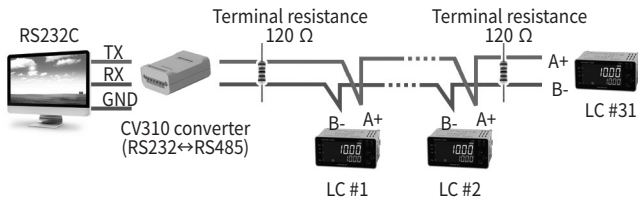

- The communication cable uses twisted-pair cable to connect several LCs.
- Connect twisted-pair cable among LCs by Daisy chain method, the terminal has resistances of around 120 Ω at both ends with communication line.
- Set the parameter values related to LC communication as Master (make sure that the address is not set as duplicate)
- You can connect up to 31 LCs.
- ※ RS232↔RS485 converter CV310 is sold separately.

## Communication control method

- The Modbus communication starts by transmitting a query from the Master to the counter
- The counter monitors the query and sends a response to the master, if the address is confirmed.

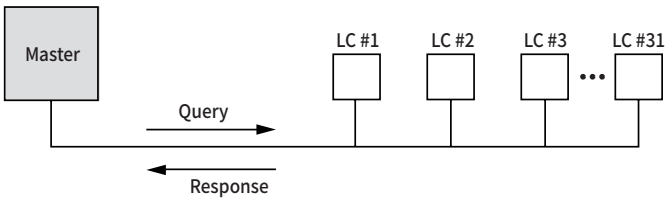

### 1. Query

Query (Master)				
Address	Command	Start address	Number of data	CRC16
				CRC16
Address	LC address (1~127)			
Command	Function Code (01H~06H, 10H)			
Start address	Register start address for transfer request			
Number of data	Number of data for transfer request			
CRC16	Checksum from address to number of data			

### 2. Response

Response (counter)				
Address	Command	Number of data	Data	CRC16
				CRC16
Address	LC address (1~127)			
Command	Requested function code (01H~06H, 10H)			
Number of data	Number of data to transfer			
Data	Data to transfer			
CRC16	Checksum from address to data			

## Communication function modes

Display	Name	Settings	Display condition	Initial value
5-n0 001	Communication address	001 → 127 1 127 •A communication error will occur if you use the same address in LC during multi-communication •You can connect 31 units during multi communication	Communication model	001
6P5 96	Communication speed	24 → 48 → 96 → 192 → 384 2400 4800 9600 19200 38400	Communication model	96
PE4 nonE	Communication parity bit	nonE → EvEn → odd none even odd	Communication model	nonE
r4k 20	Communication response waiting time	05 → 99 5 ms 99 ms	Communication model	20
E4P on	Communication write inhibit	OFF → on OFF ON •If communication write inhibit is set to ON, it is not possible to set data by communication.	Communication model	on

Communication speed	Setting range of communication response waiting time
2400 bps	16 ms ~ 99 ms
4800 bps	8 ms ~ 99 ms
9600 bps	5 ms ~ 99 ms
19200 bps	5 ms ~ 99 ms
38400 bps	5 ms ~ 99 ms

# COMMANDS

## 1. Func 01H (Read Coil Status)

Query (Master)							
Slave Addr	Func	Start Addr		No. of Points		CRC16	
		High	Low	High	Low	Low	High
1byte	1byte	1byte	1byte	1byte	1byte	1byte	1byte

Response (Slave)					
Slave Addr	Func	Data Byte Count	Data	CRC16	
				Low	High
1byte	1byte	1byte	1byte	1byte	1byte

※ Func 01H usage example

(LC address 01 current status: RST KEY = OFF, BAT RST KEY = OFF, OUT1 = ON, OUT2 = ON, BOUT = OFF)

Query (Master)							
Slave Addr	Func	Start Addr		No. of Points		CRC16	
		High	Low	High	Low	Low	High
01	01	00	00	00	05	FC	09

Response (Slave)					
Slave Addr	Func	Data Byte Count	Data	CRC16	
				Low	High
01	01	01	0C	51	8D

## 2. Func 02H (Read Input Status)

Query (Master)							
Slave Addr	Func	Start Addr		No. of Points		CRC16	
		High	Low	High	Low	Low	High
1byte	1byte	1byte	1byte	1byte	1byte	1byte	1byte

Response (Slave)					
Slave Addr	Func	Data Byte Count	Data	CRC16	
				Low	High
1byte	1byte	1byte	1byte	1byte	1byte

※ Func 02H usage example

(LC address 01 current status :external RST = ON, external BRST = OFF, CP1 = OFF, CP2 = OFF)

Query (Master)							
Slave Addr	Func	Start Addr		No. of Points		CRC16	
		High	Low	High	Low	Low	High
01	02	00	00	00	05	B8	09

Response (Slave)					
Slave Addr	Func	Data Byte Count	Data	CRC16	
				Low	High
01	02	01	01	60	48

## 3. Func 03H (Read Holding Registers)

Query (Master)							
Slave Addr	Func	Start Addr		No. of Points		CRC16	
		High	Low	High	Low	Low	High
1byte	1byte	1byte	1byte	1byte	1byte	1byte	1byte

Response (Slave)						
Slave Addr	Func	Data Byte Count	Data (n = 1~16)		CRC16	
			High	Low	Low	High
1byte	1byte	1byte	n-byte	n-byte	1byte	1byte

## 4. Func 04H (Read Input Registers)

Query (Master)							
Slave Addr	Func	Start Addr		No. of Points		CRC16	
		High	Low	High	Low	Low	High
1byte	1byte	1byte	1byte	1byte	1byte	1byte	1byte

Response (Slave)						
Slave Addr	Func	Data Byte Count	Data (n = 1~13)		CRC16	
			High	Low	Low	High
1byte	1byte	1byte	n-byte	n-byte	1byte	1byte

## 5. Func 05H (Force Single Coil)

Query (Master)							
Slave Addr	Func	Coil Addr		Force Data		CRC16	
		High	Low	High	Low	Low	High
1byte	1byte	1byte	1byte	1byte	1byte	1byte	1byte

Response (Slave)							
Slave Addr	Func	Coil Addr		Force Data		CRC16	
		High	Low	High	Low	Low	High
1byte	1byte	1byte	1byte	1byte	1byte	1byte	1byte

#### 6. Func 06H (Preset Single Register)

Query (Master)							
Slave Addr	Func	Register Addr		Preset Data		CRC16	
		High	Low	High	Low	Low	High
1byte	1byte	1byte	1byte	1byte	1byte	1byte	1byte

Response (Slave)							
Slave Addr	Func	Register Addr		Preset Data		CRC16	
		High	Low	High	Low	Low	High
1byte	1byte	1byte	1byte	1byte	1byte	1byte	1byte

#### 7. Func 10H (Preset Multiple Registers)

Query (Master)										
Slave Addr	Func	Start Addr		No. of Register		Data Byte Count	Data (n = 1~16)		CRC16	
		High	Low	High	Low		High	Low	Low	High
1byte	1byte	1byte	1byte	1byte	1byte	1byte	n-byte	n-byte	1byte	1byte

Response (Slave)							
Slave Addr	Func	Start Addr		No. of Register		CRC16	
		High	Low	High	Low	Low	High
1byte	1byte	1byte	1byte	1byte	1byte	1byte	1byte

#### 8. Exception (Exception code transmission in case of communication error)

Response (Slave)				
Slave Addr	Func + 80H	Exception code	CRC16	
			Low	High
1byte	1byte	1byte	1byte	1byte

Exception	Description
1	Commands not supported
2	Start address of the requested not matching the address that can be sent by the device
3	Number of requested data not matching the number that can be sent by the device
4	The requested command cannot be processed normally
5	If communication write inhibit is ON, Exception code 4 sent during communication write request

※ Exception usage example (If the Start Addr of the requested data is an error)

Query (Master)							
Slave Addr	Func	Start Addr		No. of Points		CRC16	
		High	Low	High	Low	Low	High
01	03	00	95	00	07	14	24

Response (Slave)				
Slave Addr	Func + 80H	Exception code	CRC16	
			Low	High
01	83	02	C0	F1

# MAPPING TABLE

## 1. Func 01H/05H Mapping Table (output status / reset)

Output status / reset						
ADDR	FUNC	Function	Setting range			
00001 (0000)	01/05	Reset terminal input	0	off	1	on
00002 (0001)	01/05	Batch-Reset terminal input	0	off	1	on
00003 (0002)	01	OUT1 output	0	off	1	on
00004 (0003)	01	OUT2 output	0	off	1	on
00005 (0004)	01	Batch output	0	off	1	on

## 2. Func 02H Mapping Table (input status)

Input status						
ADDR	FUNC	Function	Setting range			
10001 (0000)	02	Reset terminal input	0	off	1	on
10002 (0001)	02	Batch-reset terminal input	0	off	1	on
10003 (0002)	02	CP1 input	0	off	1	on
10004 (0003)	02	CP2 input	0	off	1	on
10005 (0004)	02	RESERVED	20H			

## 3. Func 04H Mapping Table (product information / product monitoring)

Product information			
ADDR	FUNC	Function	Setting range
30101 (0064)	04	Product no. Low	0
30102 (0065)	04	Product no. High	0
30103 (0066)	04	Hardware version	0
30104 (0067)	04	Firmware version	0
30105 (0068)	04	Model name	"LC"
30106 (0069)	04	Product model	"62" / "61" / "42" / "41" * Depending on the product model, displays one of four product models
30107 (006A)	04	RESERVED	20h
30108 (006B)	04	RESERVED	20h

Product monitoring						
ADDR	FUNC	Function	Setting range			
31001 (03E8)	04	LED display status	0 off 1 on			
			bit14 TIM LED bit8 OUT2 LED			
			bit13 SET2 LED bit7 BATCH OUT LED			
			bit12 SET1 LED bit6 STA LED			
			bit11 LOCK LED bit5 INH LED			
			bit10 BATCH LED bit4 RST LED			
bit9 OUT1 LED bit3 CWP LED						
31002 (03E9) ~ 31003(03EA)	04	Batch PV	6 digits (0~999999), 4 digits (0~9999)			
31004 (03EB) ~ 31005(03EC)	04	PV	※ Counter 6 digits (-99999~999999), 4 digits (-999~9999) ※ Timer -. refer to SV settings (ADDR 40001)			
31006 (03ED)	04	Dot Point	※ Counter 0 6 digits (000000), 4 digits (0000) 1 6 digits (000000), 4 digits (0000) 2 6 digits (0000.00), 4 digits (00.00) 3 6 digits (000.000), 4 digits (0.000) 4 6 digits (00.0000), 4 digits (x) 5 6 digits (0.00000), 4 digits (x)			
			※Timer -. Set dot position by time range 0 u.01s 5 d.01s 1 u.1s 6 d.1s 2 u1s 7 d1s 3 u1m 8 d1m 4 u1h 9 d1h			
			31007 (03EE) ~ 31008(03EF)	04	SV2	※ Counter 6 digits (0~999999), 4 digits (0~9999) ※ Timer -. Refer to SV settings (ADDR 40001)

Product monitoring			
ADDR	FUNC	Function	Setting range
31009 (03F0) ~ 31010(03F1)	04	SV1	※ Counter 6 digits (0~999999), 4 digits (0~9999) ※ Timer -. Refer to SV settings (ADDR 40001)
31011 (03F2) ~ 31012(03F3)	04	Batch SV	6 digits (0~999999) 4 digits (0~9999)
31013 (03F4)	04	Input logic	0 NPN 1 PNP

## 4. Func 03H/06H/10H Mapping Table (SV / counter / timer / communication settings)

SV settings			
ADDR	FUNC	Function	Setting range
40001 (0000) ~ 40002 (0001)	03/06/16	SV2	※ Counter 6 digits (0~999999), 4 digits (0~9999) ※ Timer (decimal) 6 digits (0~999999), 4 digits (0~9999) ※ Timer (sexagesimal) u.01s 6 digits (0~595999), 4 digits (0~5999) u.1s 6 digits (0~959599), 4 digits (0~9599) u1s 6 digits (0~995959), 4 digits (0~9959) u1m 6 digits (0~999959), 4 digits (0~9959) u1h 6 digits (0~999923), 4 digits (0~9923)
40003 (0002) ~ 40004 (0003)	03/06/16	SV1	
40005 (0004) ~ 40006 (0005)	03/06/16	Batch SV	※ 6 digits: 0 ~ 999999 ※ 4 digits: 0 ~ 9999

Counter settings									
ADDR	FUNC	Function	Setting range						
40051 (0032)	03/06/16	Operation mode	0 counter 3 twin timer 1 batch-counter 4 batch-timer 2 timer						
			40052 (0033)	03/06/16	Input mode	0 U-A 6 UD-A 1 U-B 7 UD-B 2 U-AB 8 UD-C 3 D-A 9 UD-D 4 D-B A UD-E 5 D-AB B UD-F			
						40053 (0034)	03/06/16	RESERVED	20h
40054 (0035)	03/06/16	Output mode				0 N 4 K 1 F 5 P 2 C 6 Q 3 R 7 A			
						40055 (0036)	03/06/16	Max. counting speed	0 1 cps 2 1 Kcps 1 30 cps 3 10 Kcps
									40056 (0037)
40057 (0038)	03/06/16	OUT1 output time	0000 ~ 9999 (Hold ~ 99.99 sec)						
40058 (0039)	03/06/16	Dot Point	0 6 digits (000000), 4 digits (0000) 1 6 digits (00000.0), 4 digits (000.0) 2 6 digits (0000.00), 4 digits (00.00) 3 6 digits (000.000), 4 digits (0.000) 4 6 digits (00.0000), 4 digits (x) 5 6 digits (0.00000), 4 digits (x)						
			40059 (003A)	03/06/16	Min. input signal time	0 1 ms 1 20 ms			
						40060 (003B)	03/06/16	Prescale Dot Point	1 6 digits (00000.0), 4 digits (000.0) 2 6 digits (0000.00), 4 digits (00.00) 3 6 digits (000.000), 4 digits (0.000) 4 6 digits (00.0000), 4 digits (x) 5 6 digits (0.00000), 4 digits (x)
			40061 (003C)	03/06/16	Prescale				6 digits (0.00001~999999), 4 digits (0.001~9999)
									40062 (003D)
40063 (003E)	03/06/16	RESERVED	20h						
40064 (003F)	03/06/16	RESERVED	20h						
40065 (0040)	03/06/16	Backup	0 clear 1 save						
40066 (0041)	03/06/16	Lock	0 Lock-off 2 Lock-set 1 Lock-on 3 Lock-reset						

Timer settings						
ADDR	FUNC	Function	Setting range			
40101 (0064)	03/06/16	Operation mode	0	counter	3	twin timer
			1	batch-counter	4	batch-timer
			2	timer		
40102 (0065)	03/06/16	Range	0	u.01s	5	d.01s
			1	u.1s	6	d.1s
			2	u1s	7	d1s
			3	u1m	8	d1m
			4	u1h	9	d1h
40103 (0066)	03/06/16	Scale	0	Decimal	1	Sexagesimal
40104 (0067)	03/06/16	Output mode	※ Timer			
			0	pond	6	s.on1
			1	sond	7	s.int
			2	sofd	8	s.flk
			3	sint	9	s.fr
			4	sadd	A	s.fp
			5	s.ond	B	s.fq
			※ Twin timer			
			C	tw-pond	F	tw-s.ond
			D	tw-pofd	10	tw-s.ofd
			E	tw-poft		
40105 (0068)	03/06/16	RESERVED	20h			
40106 (0069)			20h			
40107 (006A)	03/06/16	OUT output time	0000 (Hold) ~ 9999 (99.99 sec)			
40108 (006B)	03/06/16	RESERVED	20h			
40109 (006C)	03/06/16	Min. input signal time	0	1 ms	1	20 ms
40110 (006D)	03/06/16	RESERVED	20h			
40111 (006E)			20h			
40112 (006F)			20h			
40113 (0070)			20h			
40114 (0071)			20h			
40115 (0072)	03/06/16	Backup	0	clear	1	save
40116 (0073)	03/06/16	Lock	0	lock-off	2	lock-set
			1	lock-on	3	lock-rst


Communication settings						
ADDR	FUNC	Function	Setting range			
40151 (0096)	03/06/16	ADDR	1 ~ 7F			
40152 (0097)	03/06/16	BPS	0	2400	3	19200
			1	4800	4	38400
			2	9600		
40153 (0098)	03/06/16	Parity	0	none		
			1	odd		
			2	even		
40154 (0099)	03/06/16	Stop	0	1-stop (fixed)		
40155 (009A)	03/06/16	Response wait time	5 ~ 99 (5ms ~ 99ms)			
40156 (009B)	03/06/16	Communication write inhibit	0	off	1	on

# Dimensions and panel cutouts


[Unit: mm]

## LC3

### ● Dimensions

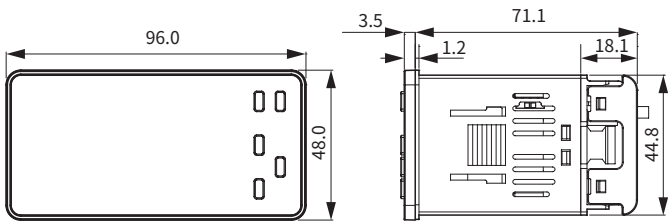


### ● Panel cutout

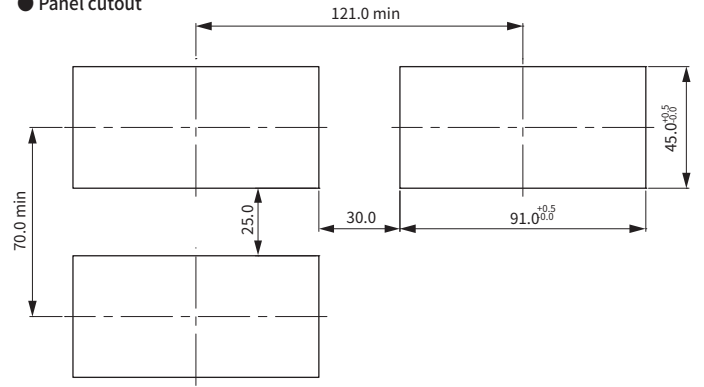


## LC4

### ● Dimensions

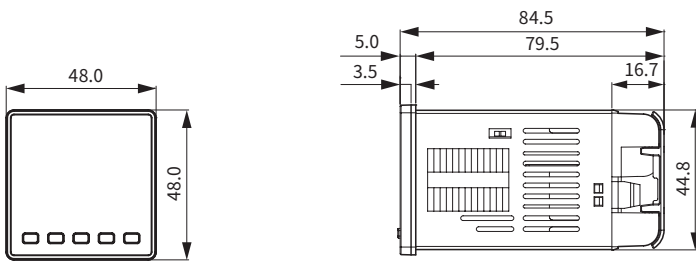


### ● Panel cutout

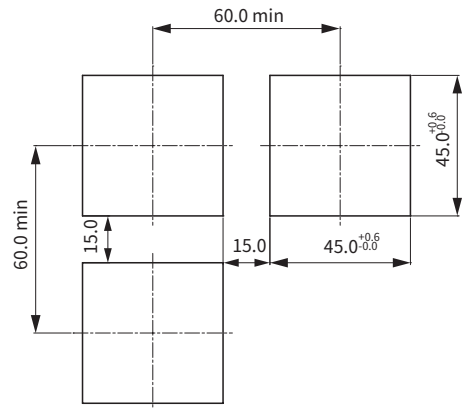


## LC6

### ● Dimensions

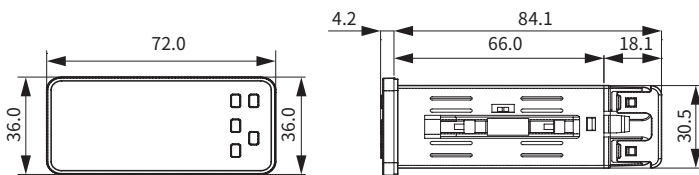


### ● Panel cutout

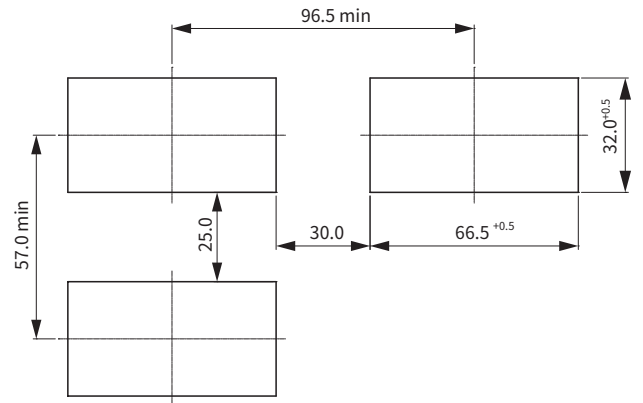


## LC7

### ● Dimensions

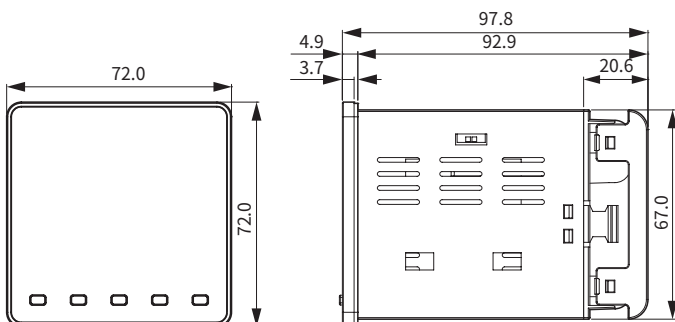

### ● Panel cutout

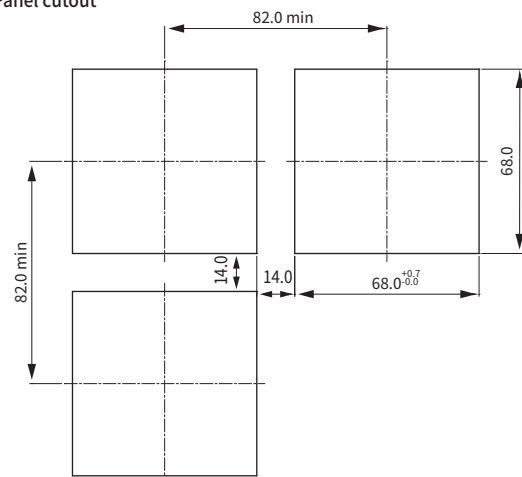

# Connection diagrams

Model	No sub output		RS485 (MODBUS-RTU)	
	1-stage output	2-stage output	1-stage output	2-stage output
LC3	<b>●LC3-P61N</b> 	<b>●LC3-P62N</b> 	<b>●LC3-P61C</b> 	<b>●LC3-P62C</b> 
	<b>●LC4-P61N/P41N</b> 	<b>●LC4-P62N/P42N</b> 	<b>●LC4-P61C/P41C</b> 	<b>●LC4-P62C/P42C</b> 
	<b>●LC6-P61N</b> 	<b>●LC6-P62N</b> 	<b>●LC6-P61C</b> 	<b>●LC6-P62C</b> 
	<b>●LC7-P61N</b> 	<b>●LC7-P62N</b> 	<b>●LC7-P61C</b> 	<b>●LC7-P62C</b> 